



Models/Modelos/Modèles
P18550LF, P18550LF-SD &
P18550LF-SD-W
Series/Series/Seria

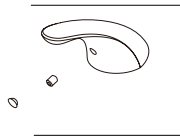

RP70246▲
Lever Handle w/Set Screw and Button
Manija en Palanca con Tornillo de Ajuste y Botón
Manette avec Vis de Calage et Bouton

RP44123▲
Repair Kit
Equipo/Herramientas para reparaciones
Kit de réparation

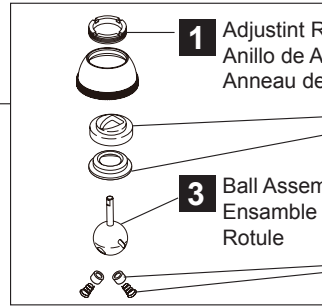


1 Adjustint Ring
Anillo de Ajuste
Anneau de Réglage

2 Cam and packing
Leva y Empaque
Jeu de cames

3 Ball Assembly
Ensamble de la Bola
Rotule


4 Seats and Springs
Asientos y Resortes
Sièges et Ressorts

RP70245▲
Wand Assembly
Ensamble de la Cabeza del Rociador
Poignée du bec

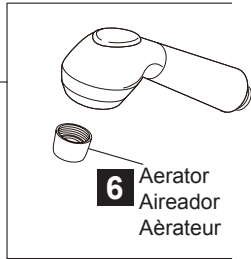

6 Aerator
Aireador
Aérateur

▲ Specify Finish
Especifíque el Acabado
Précisez le Fini

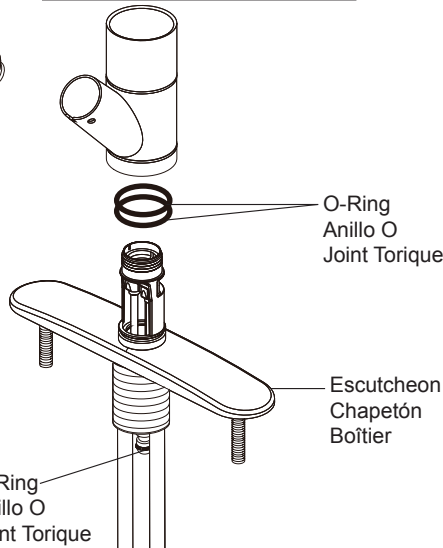


5 O-Ring
Anillo O
Joint Torique



O-Ring
Anillo O
Joint Torique

Escutcheon
Chapetón
Boîtier

RP70247▲
Hose Assembly
(Includes Gasket & Adapter)
Conjunto de manguera de (Incluye Junta Y adaptador)
Tuyau souple (Y compris joint & Adaptateur)

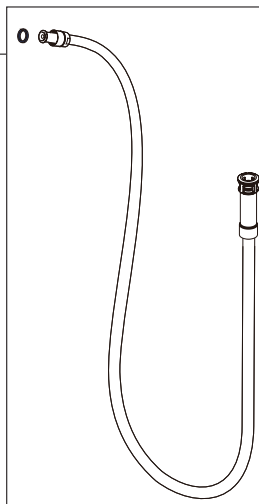


RP63207
Zinc Weights and Screws
Pesas de Cinc y Tornillos
Poids en plomb et vis

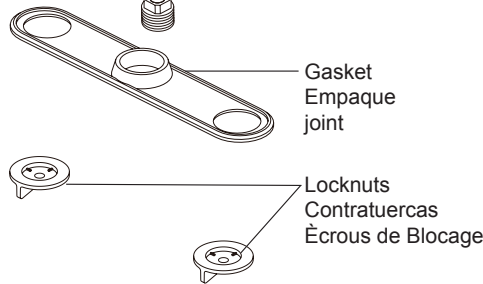 

Gasket
Empaque
joint

Locknuts
Contratuercas
Écrous de Blocage

RP70249▲
Dispenser Assembly (complete)
Ensamble del Surtidor (completo)
Distributeur (complet)

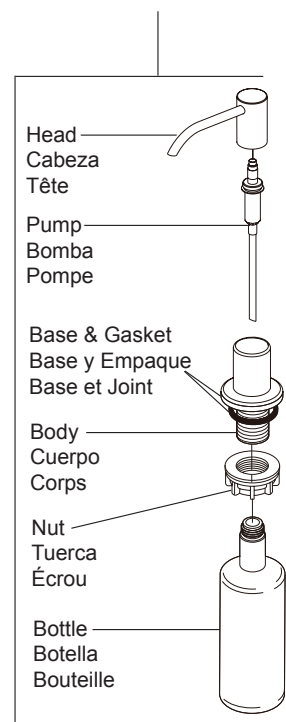

Head
Cabeza
Tête

Pump
Bomba
Pompe


Base & Gasket
Base y Empaque
Base et Joint

Body
Cuerpo
Corps

Nut
Tuerca
Écrou

Bottle
Botella
Bouteille

RP70251
Gasket (1), Washer (1), Nut (1) & Screws (2)
Empaque (1), Arandela (1), Tuerca (1) y Tornillos (2)
Joint (1), Rondelle (1), Écrou (1) et Vis (2)

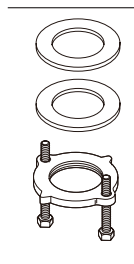

RP5861
Coupling Nuts (Optional, not included)
Tuercas de Acoplamiento (Opcional, no incluido)
Écrous de Raccordement (Option, non inclus)

