

URCO UNIVERSAL SERIES RELAY CAPACITOR OVERLOAD



For Refrigeration Systems With or Without Run Capacitors. Maintain a High Efficiency System or Save an Old System.

- Replaces Relay, Capacitor and Overload
- Works on RSIR, CSIR, PSC & CSR Compressors
- “Push-On” Compressor Terminals and 1/4” Capacitor Terminals
- Designed for Modern High Efficiency Compressors
- Helps Older Compressors to Start and Run Cooler
- Easy Mount Clip for Quick Installation
- Easy to Read Instructions
- Prevents Low Voltage Starting Problems

Part No.	HP Rating	Volts	Cont. Running Amps
URCO210	1/3 to 1/2	120	13.3
URCO410	1/4 to 1/3	120	6.8
URCO810	1/12 to 1/5	120	4.05

URCORC SERIES UNIVERSAL 4 ‘N 1 RELAY CAPACITOR, OVERLOAD & RUN CAPACITOR




For Refrigeration Systems With or Without Run Capacitors. Maintain a High Efficiency System or Save an Old System.

- Same Features and Benefits of the Universal Series
- Adds a Closely Matched System Run Capacitor
- Replaces Current-Type Relays

Part No.	HP Rating	Run Cap. Size μ FD	Volts	Cont. Running Amps
URCO210RC	1/3 to 1/2	20	120	13.3
URCO410RC	1/4 to 1/3	15	120	6.8
URCO810RC	1/12 to 1/5	12.5	120	4.05

URO SERIES UNIVERSAL RELAY OVERLOAD

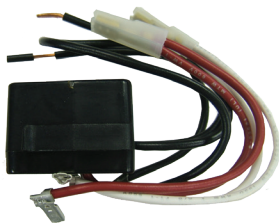

For Refrigeration Systems With or Without Run Capacitors. Maintain a High Efficiency System or Save an Old System.

- Replaces Relay and Overload
- Works on “RSIR”, “CSIR”, “PSC” & “CSR” Compressors
- Locked Rotor Protection, Eliminates Start Winding Overheating
- “Snap-On” Bracket for Easy Mounting
- Quick and Easy Installation
- Wiring Instructions on the Package
- Instructions on Adding a Start Capacitor And/Or Run Capacitor
- Wire Leads for Those Odd Installations, Wire Nuts Included

Part No.	HP Rating	Volts
URO41	1/4 to 1/3	120
URO81	1/12 to 1/5	120

UPRO SERIES PUSH-ON RELAY



For Refrigeration Systems With or Without Run Capacitors. Maintain a High Efficiency System or Save an Old System.

- Replaces Relay and Overload
- Works on RSIR, CSIR, PSC & CSR Compressors
- “Push-On” Relay Overload
- Quick Connect Push-On Terminals for Run And/Or Start Capacitor
- Wiring Instructions on the Package
- Instructions for Adding a Start Capacitor And/Or Run Capacitor

Part No.	HP Rating	Volts
UPRO21	1/3 to 1/2	120
UPRO41	1/4 to 1/3	120
UPRO81	1/12 to 1/5	120