


Exploded View

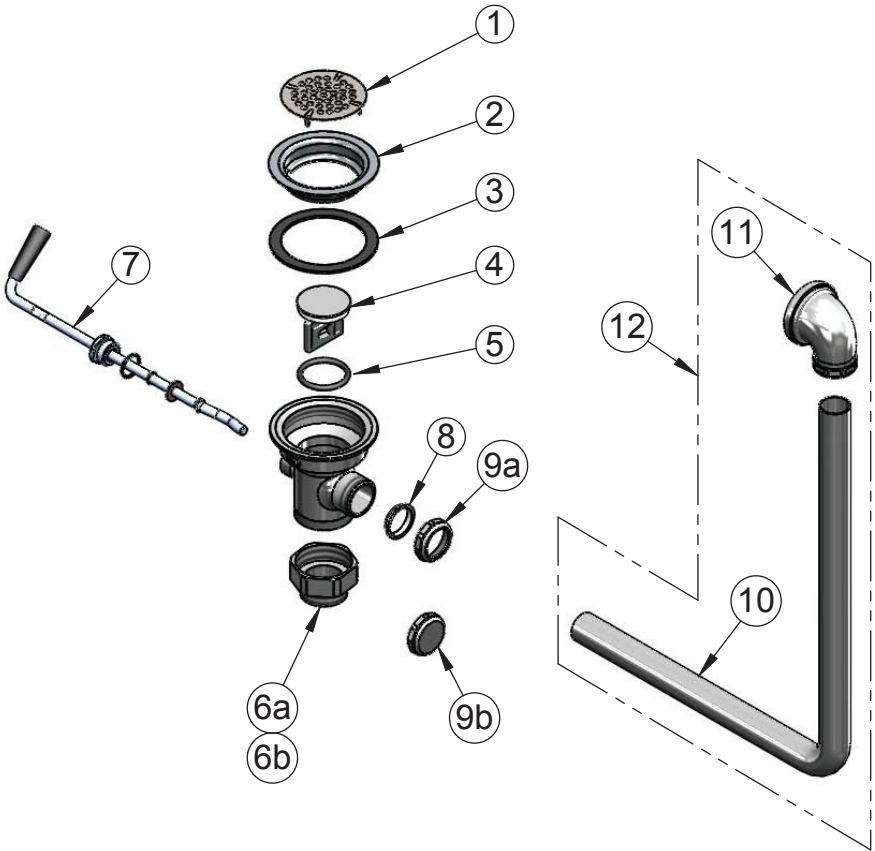


B-3940 Series

Part Number Guide

B-3940 Series Rotary Waste Drain Valve

1	Strainer, 3" Snap-in Removable	010385-45
2	Flange, 3" Face	015306-45
3	Gasket, 3" Face Flange	010381-45
4	Plunger, Twist Drain	010388-45
5	O-Ring, Plunger	010389-45
6a	Adapter, 2" NPT x 1½" NPT Male	B-3945
6b	Adapter, 2" NPT x 1½" BSP Male	B-3945-BSP
7	Handle Asm, Rotary Waste Valve Twist	010393-45
8	Ferrule, Coupling Nut	010390-45
9a	Nut, Coupling For Twist Drain	010391-45
9b	Cap, O'Flow Seal Drain	012640-45
10	Tube, Overflow Elbow	011355-45
11	Head Asm, Overflow Tube	011356-45
12	Waste Drain Overflow Kit	B-3999-OF

Exploded View

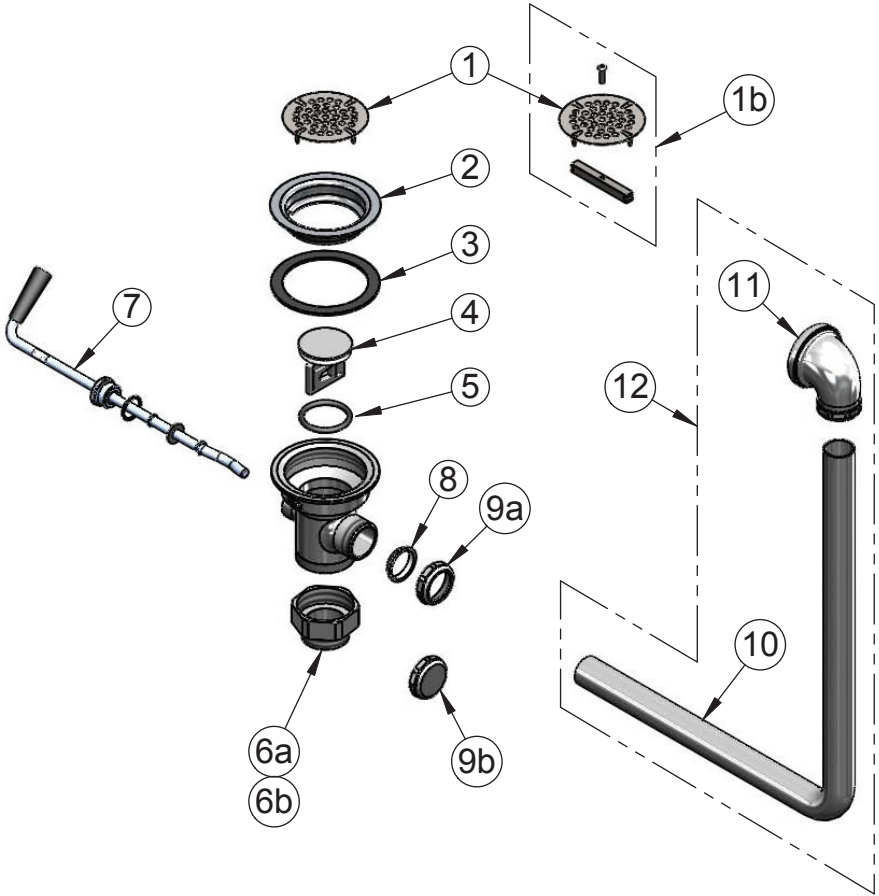


B-3950 Series

Part Number Guide

B-3950 Series Rotary Waste Drain Valve

1	Strainer, 3½" Snap-in Removable	010386-45
1b	Vandal Resistant Locking Flat Strainer, 3½"	010386-45VR
2	Flange, 3½ Face	010384-45
3	Gasket, 3½" Face Flange	010382-45
4	Plunger, Twist Drain	010388-45
5	O-Ring, Plunger	010389-45
6a	Adapter, 2" NPT x 1½" NPT Male	B-3945
6b	Adapter, 2" NPT x 1½" BSP Male	B-3945-BSP
7	Handle Asm, Rotary Waste Valve Twist	010393-45
8	Ferrule, Coupling Nut	010390-45
9a	Nut, Coupling For Twist Drain	010391-45
9b	Cap, O'Flow Seal Drain	012640-45
10	Tube, Overflow Elbow	011355-45
11	Head Asm, Overflow Tube	011356-45
12	Waste Drain Overflow Kit	B-3999-OF

Exploded View

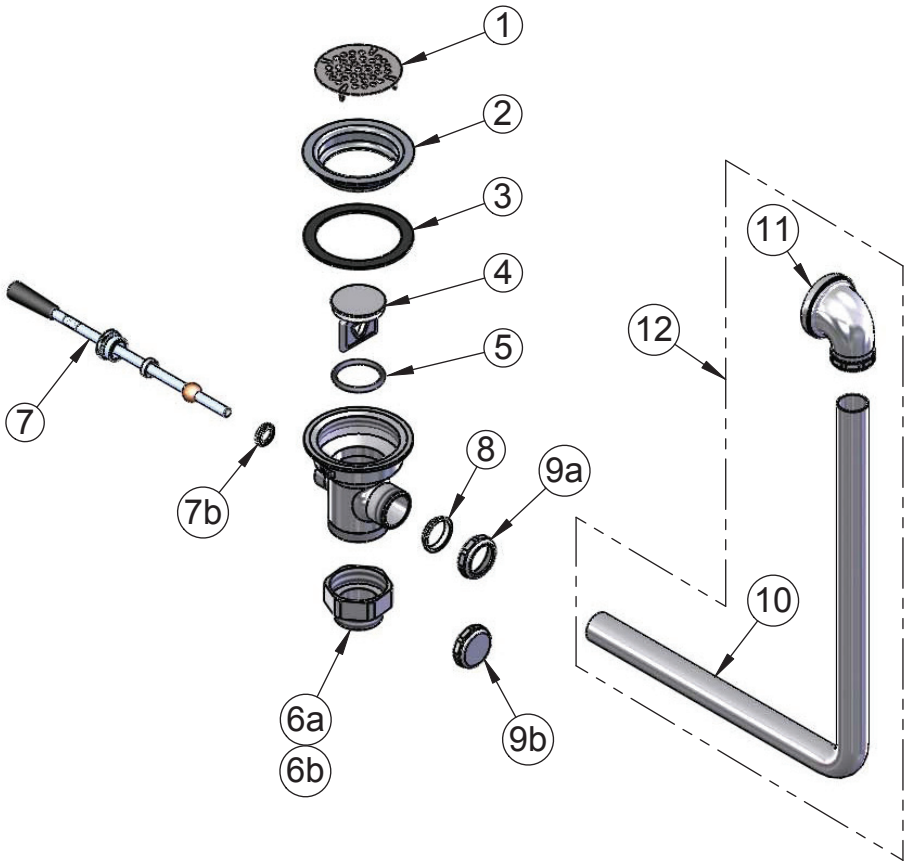

B-3960 Series

Part Number Guide

B-3960 Series Lever Waste Drain Valve

1	Strainer, 3" Snap-in Removable	010385-45
2	Flange, 3" Face	015306-45
3	Gasket, 3" Face Flange	010381-45
4	Plunger Casting for Lever Waste Drain	015405-45
5	O-Ring, Plunger	010389-45
6a	Adapter, 2" NPT x 1½" NPT Male	B-3945
6b	Adapter, 2" NPT x 1½" BSP Male	B-3945-BSP
7	Handle Asm, Waste Drain Valve Lever	010394-45
7b	Bushing, Waste Drain Lever Handle	010392-45
8	Ferrule, Coupling Nut	010390-45
9a	Nut, Coupling For Twist Drain	010391-45
9b	Cap, O'Flow Seal Drain	012640-45
10	Tube, Overflow Elbow	011355-45
11	Head Asm, Overflow Tube	011356-45
12	Waste Drain Overflow Kit	B-3999-OF