

No.	Notes	MODEL	RKMB	RKMB	RKMB
		TECHNICAL VARIATION	A	A	A
		COOLING CAPACITY	090-150	090-150	090-150
		HEATING CAPACITY	15	22	25
HEAT EXCHANGER, BURNER/MANIFOLD					
76	Stk	Heat Exchanger	AS-90645-01	AS-90645-03	AS-90645-03
77		Turbulators	AE-58922-01 (6)	AE-58922-01 (9)	AE-58922-01 (9)
78		Inducer Mounting Plate Gasket	68-42518-02	68-42518-02	68-42518-02
79		Inducer Mounting Plate	AE-90675-03	AE-90675-02	AE-90675-04
80		Gasket - Induced Draft Blower	68-23643-02 (2)	68-23643-02 (2)	68-23643-02 (2)
Note: Induced Draft Blower 70-23641-81 is 230 V, and 70-23641-82 is 460 V. Verify original part before replacing.					
81	Stk	Induced Draft Blower w/Gasket - Voltages C/P/Y	70-23641-81 (2)	70-23641-81 (2)	70-23641-81 (2)
81	Stk	Induced Draft Blower w/Gasket - Voltages D/N - Before F2301	70-23641-81 (2)	70-23641-81 (2)	70-23641-81 (2)
81	Stk	Induced Draft Blower w/Gasket - Voltages D/N - After F2301	70-23641-82 (2)	70-23641-82 (2)	70-23641-82 (2)
82	Stk	Flue Duct	75-23678-01 (2)	75-23678-01 (2)	75-23678-01 (2)
		Gasket - Flue Duct	68-23680-04 (4)	68-23680-04 (4)	68-23680-04 (4)
83	Stk	Pressure Switch (2)	42-23649-02	42-23649-02	42-23649-02
84		Pressure Switch Mounting Bracket (2) - Before F1909	AE-90635-03	AE-90635-03	AE-90635-03
84		Pressure Switch Mounting Bracket (2) - After F1909	AE-90635-05	AE-90635-05	AE-90635-05
85	Stk	Inside Cabinet Panel/Pieces	47-25349-09	47-25349-02	47-25349-04
86	Stk	Spark Ignitor	62-23556-08	62-23556-08	62-23556-08
87	Stk	Flame Sensor	62-23543-02	62-23543-02	62-23543-02
88	Stk	Overtemperature Limits (2)	47-22861-01	47-22861-01	47-22861-01
89		Burner Support	AE-90643-01	AE-90643-01	AE-90643-01
90		Burner Support Brackets (2)	AE-90642-02	AE-90642-02	AE-90642-02
91	Stk	Burner Assembly	AS-90772-01	AS-90772-02	AS-90772-02
92		Heat Shield	AE-90644-02	AE-90644-02	AE-90644-02
93	Stk	Manifold (w/o Orifices)	81-42509-03	81-42509-02	81-42509-02
94	Stk	Square Head Plug (Used to plug unused holes on Manifold)	81-23593-01 (4)	81-23593-01 (1)	81-23593-01 (1)
95		Burner Orifices - Natural Gas	See Orifice Selection Chart		
95		Burner Orifices - LP	See Orifice Selection Chart		
		Number of Orifices	(6)	(9)	(9)

No.	Notes	MODEL	RKMB	RKMB
		TECHNICAL VARIATION	A	A
		COOLING CAPACITY	180	180
		HEATING CAPACITY	25	35
HEAT EXCHANGER, BURNER/ MANIFOLD				
12a		Gas Furnace Access Panel	AS-90715-04	AS-90715-05
76	Stk	Heat Exchanger	AS-90645-06	AS-90645-04
77		Turbulators	AE-58922-02 (10)	AE-58922-02 (14)
78		Inducer Mounting Plate Gasket	68-42518-03	68-42518-03
79		Inducer Mounting Plate	AE-90675-08	AE-90675-06
80	Stk	Gasket - Induced Draft Blower	68-23643-02 (2)	68-23643-02 (3)
Note: Induced Draft Blower 70-23641-81 is 230 V, and 70-23641-82 is 460 V. Verify original part before replacing.				
81	Stk	Induced Draft Blower w/Gasket - Voltages C/P/Y	70-23641-81 (2)	70-23641-81 (3)
81	Stk	Induced Draft Blower w/Gasket - Voltages D/N - Before F1901	70-23641-81 (2)	70-23641-81 (3)
81	Stk	Induced Draft Blower w/Gasket - Voltages D/N - After F1901	70-23641-82 (2)	70-23641-82 (3)
		Transformer	See Electric Group	
82		Flue Duct	75-23678-01 (3)	75-23678-01 (3)
		Gasket - Flue Duct	68-23680-04 (6)	68-23680-04 (6)
83a	Stk	Pressure Switch - Left	NA	42-23649-03
83b	Stk	Pressure Switch - Middle Left	42-23649-03	42-23649-02
83c	Stk	Pressure Switch - Middle Right	42-23649-02	42-23649-03
83d	Stk	Pressure Switch - Right	NA	NA
84a		Pressure Switch Mounting Bracket - (Single Mount) - Before F1909	AE-90635-03 (1)	AE-90635-03 (2)
84a		Pressure Switch Mounting Bracket - (Single Mount) - After F1909	AE-90635-05 (1)	AE-90635-05 (2)
84b		Pressure Switch Mounting Bracket (Dual Mount)	AE-90635-04	AE-90635-04
	Stk	Limit Control	47-25349-10	47-25349-03
Burner Assembly:				
87	Stk	Spark Ignitor	62-23556-09	62-23556-09
85	Stk	Flame Sensor	62-23543-02	62-23543-02
88	Stk	Overtemperature Limits (4)	47-22861-01	47-22861-01
89		Burner Support	AS-90830-01	AS-90830-01
90		Burner Support Brackets (2)	AE-90642-02	AE-90642-02
91	Stk	Burner Assembly	AS-90772-05	AS-90772-03
92		Heat Shield	AE-90644-03	AE-90644-03
93	Stk	Manifold (w/o Orifices)	81-42509-07	81-42509-04
		Square Head Plug (Used to plug unused holes on Manifold)	81-23593-01 (3)	81-23593-01 (1)
95		Burner Orifices - Natural Gas	See Orifice Selection Chart	
95		Burner Orifices - LP	See Orifice Selection Chart	
		Number of Orifices	(10)	(14)

No.	Notes	MODEL	RKMB	RKMB
		TECHNICAL VARIATION	A	A
		COOLING CAPACITY	240	240
		HEATING CAPACITY	30	40
HEAT EXCHANGER, BURNER/MANIFOLD				
12a		Gas Furnace Access Panel	AS-90715-05	AS-90715-03
76	Stk	Heat Exchanger	AS-90645-05	AS-90645-04
77		Turbulators	AE-58922-02 (12)	AE-58922-02 (14)
78		Inducer Mounting Plate Gasket	68-42518-03	68-42518-03
79		Inducer Mounting Plate	AE-90675-07	AE-90675-05
80		Gasket - Induced Draft Blower	68-23643-02 (3)	68-23643-02 (4)
Note: Induced Draft Blower 70-23641-81 is 230 V, and 70-23641-82 is 460 V. Verify original part before replacing.				
81	Stk	Induced Draft Blower w/Gasket - Voltages C/P/Y	70-23641-81 (3)	70-23641-81 (4)
81	Stk	Induced Draft Blower w/Gasket - Voltages D/N - Before F1901	70-23641-81 (3)	70-23641-81 (4)
81	Stk	Induced Draft Blower w/Gasket - Voltages D/N - After F1901	70-23641-82 (3)	70-23641-82 (4)
		Transformer	See Electric Group	
82		Flue Duct	75-23678-01 (3)	75-23678-01 (4)
		Gasket - Flue Duct	68-23680-04 (6)	68-23680-04 (8)
83a	Stk	Pressure Switch - Left	42-23649-03	42-23649-03
83b	Stk	Pressure Switch - Middle Left	42-23649-01	42-23649-02
83c	Stk	Pressure Switch - Middle Right	42-23649-03	42-23649-03
83d	Stk	Pressure Switch - Right	N/A	42-23649-02
84a		Pressure Switch Mounting Bracket - (Single Mount) - Before F1909	AE-90635-03 (2)	AE-90635-03 (2)
84a		Pressure Switch Mounting Bracket - (Single Mount) - After F1909	AE-90635-05 (2)	AE-90635-05 (2)
84b		Pressure Switch Mounting Bracket (Dual Mount)	AE-90635-04	AE-90635-04
	Stk	Limit Control	47-25349-09	47-25349-03
		Burner Assembly:		
87	Stk	Spark Ignitor	62-23556-09	62-23556-09
85	Stk	Flame Sensor	62-23543-02	62-23543-02
88	Stk	Overtemperature Limits (4)	47-22861-01	47-22861-01
89		Burner Support	AS-90830-01	AS-90830-01
90		Burner Support Brackets (2)	AE-90642-02	AE-90642-02
91	Stk	Burner Assembly	AS-90772-06	AS-90772-03
92	Stk	Heat Shield	AE-90644-03	AE-90644-03
93	Stk	Manifold (w/o Orifices)	81-42509-07	81-42509-04
		Square Head Plug (Used to plug unused holes on Manifold)	81-23593-01	81-23593-01
95		Burner Orifices - Natural Gas	See Orifice Selection Chart	
95		Burner Orifices - LP	See Orifice Selection Chart	
		Number of Orifices	(12)	(14)