

ACCESS VALVES

SWIVEL FLARE CONNECTIONS



ADD MULTIPLE PORTS WITH ONE FITTING

These valves offer a safe, simple installation without the need for brazing. All of the flare ends are tapped to receive access cores. JB provides a full range of various end configurations to provide greater flexibility. One core and cap are packaged with each valve.

SWIVEL TEE WITH DEPRESSOR

PART NO.	QTY.	DESCRIPTION
A31851	3	1/4" Female SAE swivel nut on run
A31852	3	1/4" Female SAE swivel nut on branch

SWIVEL TEE WITHOUT DEPRESSOR

A31854	3	1/4" Female SAE swivel nut on branch
A31864	3	1/4" Female SAE swivel nut on run

SWIVEL 3/8" SAE TEE

A31853	1	3/8" SAE x 3/8" Female SAE swivel nut x 1/4" access
A31856	1	3/8" SAE x 1/4" access x 3/8" Female SAE swivel nut


ACCESS VALVE COUPLER WITH DEPRESSOR

A33004	1	1/4" SAE swivel flare x male flare
--------	---	------------------------------------

SWIVEL FLARE W/CORE DEPRESSOR

Add a new line or control

No refrigerant loss on charged system

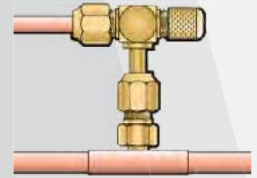


SWIVEL FLARE W/OUT CORE DEPRESSOR

Multiple ports

Additional line or controls

Additional access site

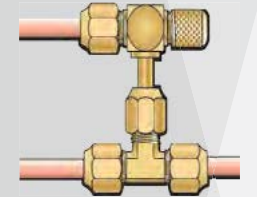

A31851

Swivel TEE w/Depressor



A31854

Swivel Tee



A31853

Swivel 3/8" SAE TEE



A33004

1/4" SAE Swivel Flare



BULKHEAD MOUNTING



BULKHEAD MOUNTING

A31434*	1	Access x 1/4" SAE w/nut
A31727*	1	Access x 3/16" and 1/4" ODS or 3/8" ODF

*Core pre-torqued to ARI

CROSSES



SWIVEL CROSS WITH DEPRESSOR

A31520	1	1/4" Female SAE swivel nut x access
--------	---	-------------------------------------

CROSS WITH THREE ACCESS PORTS

A31522	1	1/8" MPT cross
--------	---	----------------

A31434

Bulkhead Mounting



A31522

1/8" MPT Cross



A31520

1/4" Swivel Nut Cross



Access valve manufacturing