




DEKORRA
ROCK ENCLOSURES

Model 113

Listed Dimensions:
34" L x 18" W x 17" H

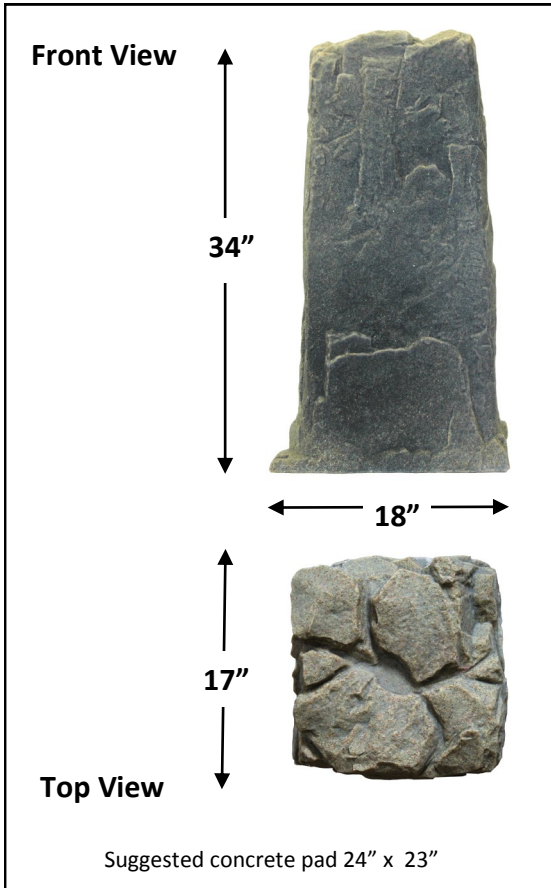

IDEAL CONCEALING APPLICATIONS:

- Telephone and Cable Pedestals up to 32" in Height
- Tall Residential Septic Ventilation Components
- Irrigation Controllers and Pedestals
- Feature Rock with Optional Address Plaque

Sample Interior Spacing

Height	Length	Width
10"	14"	14"
22"	14"	13.5"
33"	13"	13"

Diameter Sizing

Height	Diameter
10"	15" Dia
26"	14" Dia
33"	13" Dia

DEKORRA ENCLOSURE FEATURES AND BENEFITS:

- Realrock™ material provides the realistic rock features
- Commercial grade construction stands up to elements
- Lightweight, easy to move and incredible durable
- Rocks will not fade in sun or crack in cold weather
- Rocks designed to conceal existing utility devices

Dekorrra Rocks do taper in length and width as height increases. Any concerns in sizing for a specific item can be discussed with a Dekorrra Customer Service Rep at 888-635-8585, sizearock@dekorrraproducts.com along with a photo of the specific application and dimensions.



DEKORRA ROCK COLOR OPTIONS:



Autumn Bluff



Fieldstone Gray



Riverbed Brown



Sandstone Tan

ADDRESS PLAQUE OPTIONS:

	<p>Plaque Colors: CB- Copper/Black GB- Gold/Black NB- Nickel/Black</p>
<p>650-Horizontal Medium</p>	

DEKORRA AVAILABLE OPTIONS:

<p>Insulation Pouch</p>	<p>Concrete Anchors</p>	<p>Heat Cables</p>	<p>Ventilation</p>
-------------------------	-------------------------	--------------------	--------------------

<p>6" Plastic Stakes included</p>			<p>DekoRRa Products 888-635-8585 www.dekorraproducts.com</p>
-----------------------------------	--	--	--

INSTALLATION INSTRUCTIONS:

1. If heat is required, installations will require GFI protected power mounted at least 6" above all water discharge ports or per local code regulations.
2. If concrete base is required. Pour concrete pad per measurements provided. If mounting to ground, level area where enclosure is to be installed.
3. If installation requires self regulated heat tape, install per instructions securing to piping and valve. Place insulated pouch over valve and piping assembly.
4. Place rock over device. Verify that rock does not interfere with device. Insert included stakes for soil installation. For concrete installations see optional concrete installation instructions.

CONCRETE ANCHOR INSTALLATIONS

1. Drill hole with same diameter as anchor of sufficient depth. Clean drilled hole of dust and debris.
2. Place washer and nut onto threaded anchor as required.
3. With nut, washer and set pin in place insert anchor through rock flange column and into concrete base.
4. Using a proper size hammer set pin with several sharp and square strikes on head of pin until pin is flush with top of threaded anchor.

