



## Standard Foot

Part Numbers:  
54236-007-1 (P1203-Reverse-FT)  
Trim Kit – P1203-Trim-Kit

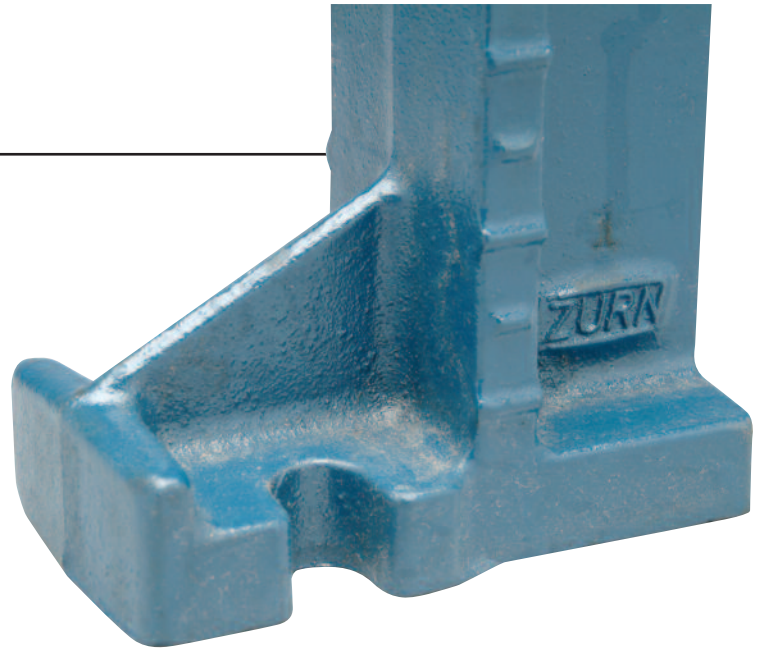

- Provided as standard on all Z1203, Z1204, Z1207, Z1208, and Z1209 water closet carrier systems.
- Interchangeable – Design allows for foot to be mounted on either the right or left side of the faceplate, while providing a rear slot to anchor the carrier assembly to the floor.
- Scale markings are provided in 1/2-inch increments to help gauge position of rough-in height.

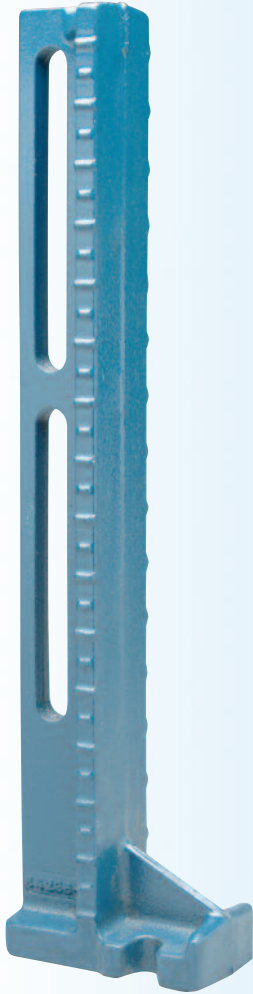