

Kingsley® Technical Specification

Grab Bar

YG5400

Stock Numbers:

- **YG5412CH – 12" Grab Bar**
Chrome Finish
- **YG5412BN – 12" Grab Bar**
Brushed Nickel Finish
- **YG5412ORB – 12" Grab Bar**
Oil Rubbed Bronze
- **YG5418CH – 18" Grab Bar**
Chrome Finish
- **YG5418BN – 18" Grab Bar**
Brushed Nickel Finish
- **YG5418ORB – 18" Grab Bar**
Oil Rubbed Bronze Finish
- **YG5424CH – 24" Grab Bar**
Chrome Finish
- **YG5424BN – 24" Grab Bar**
Brushed Nickel Finish
- **YG5424ORB – 24" Grab Bar**
Oil Rubbed Bronze
- **YG5430CH – 30" Grab Bar**
Chrome Finish
- **YG5430BN – 30" Grab Bar**
Brushed Nickel Finish
- **YG5436CH – 36" Grab Bar**
Chrome Finish
- **YG5436BN – 36" Grab Bar**
Brushed Nickel Finish
- **YG5442CH – 42" Grab Bar**
Chrome Finish
- **YG5442BN – 42" Grab Bar**
Brushed Nickel Finish

Materials:

Grab Bar posts and bars are stainless steel.



Compliance:

CSI grab bars meet or exceed the applicable requirements of the following standards:

- ANSI A117.1
- ASTM F446
- CSA B45
- CSA B651

Loaded Tested to withstand 500 lbs when securely installed per instructions. 12" long grab bars are intended for vertical installation only.

Dimensions:

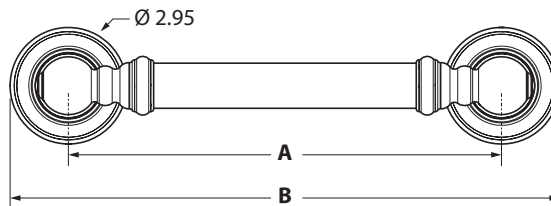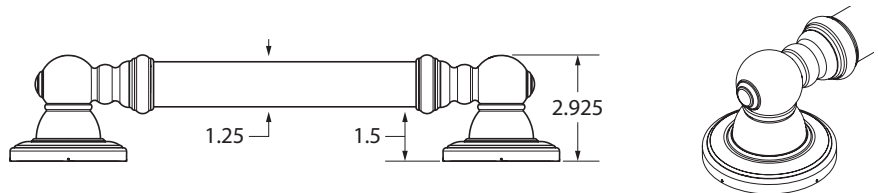

	Dim. A	Dim. B
YG5412	12	14.95
YG5418	18	20.95
YG5424	24	26.95
YG5430	30	32.95
YG5436	36	38.95
YG5442	42	44.95

Installation Instructions:

1. Please note that screws **MUST** be mounted into a wood stud for secure installation.
2. Slide the end cover away from the hub end to expose the SecureMount™ mounting flange.
3. Locate the studs behind the wall by using a stud sensor or other stud locating method. Studs are usually 16" apart; locate the center of each stud.
4. Place the grab bar on the wall where desired so that the SecureMount™ mounting flange is positioned over a wood stud. Use a level to verify desired placement.

Decide whether you would like to position your grab bar horizontally, vertically or at an angle, remembering that **BOTH** ends of the grab bar **MUST** be positioned over a wood stud. Note: Diagonal/angled installation is possible only with grab bars 24" or longer.

5. With a pencil, mark three of the mounting locations on each of the two grab bar flanges as indicated in the packed instructions.

To ensure proper installation, the SecureMount™ flange must have screws in each of the positions indicated in the packed instructions.

6. Remove the grab bar from the wall and drill 1/8" diameter pilot holes at the marked screw locations. If desired, apply silicone caulk to the back of the decorative cover to guard against water penetration.
7. To mount the grab bar, reposition one end of the grab bar SecureMount™ mounting flange over the marked holes. **NOTE: THE MOUNTING FLANGE WILL ROTATE. ROTATE THE FLANGE SO THAT IT IS FLUSH AGAINST THE WALL AND THEN PROCEED WITH THE NEXT STEP.**
8. Using the screwdriver, screw the wood screws into the SecureMount™ mounting flange at one end of the grab bar. Then screw the wood screws into the mounting flange at the other end of the grab bar.
9. Tighten the screws until secure
10. Slide the end cover over the SecureMount™ mounting flange, rotating to find the correct fit before snapping into place.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: _____ **Grab Bar**
By Moen Incorporated



Buy it for looks. Buy it for life.®

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070
 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636
 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726
 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720
 WWW.MOEN.COM
 ©Copyright Moen Incorporated